



Valencia Wall Mounted Ethanol Fireplace

User's Manual & Safety Instructions

Model: GF101650

Ethanol Fireplace



Included in delivery (Parts List):


- | | |
|---|------|
| A. Fireplace body | 1pc |
| B. 1.5L double-layer Burner | 2pc |
| C. Mounting bar unit | 1pc |
| D. Control tool | 1pc |
| E. Screws(5*30mm) | 4pcs |
| F. Wall plugs (φ8*40mm) | 4pcs |
| G. Instruction manual and safety instructions.. | |

Assembly Instructions:

1. Unpack the fireplace and accessories. Check the content for completeness and any damage incurred in transit. Keep children away from the packing.
2. Mount the mounting bar unit to the wall using the 4 screws, and wall plugs. Caution: The fireplace must only be installed on a solid wall of non-flammable material.





3. Attach the fireplace body onto the mounting bar unit. Follow the arrows.
4. Place the burner into the burning chamber of the fireplace body.

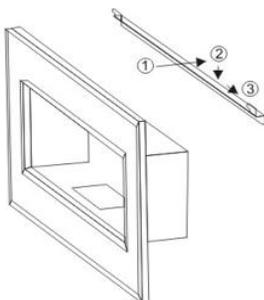

Direction for Use

Step 1: Adjust the sliding lid to its widest opening. Fill the burner with the ethanol, watch carefully till you reach under the level of the “Max” line. Do not overfill or spill.

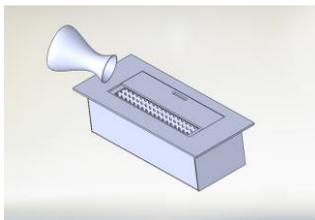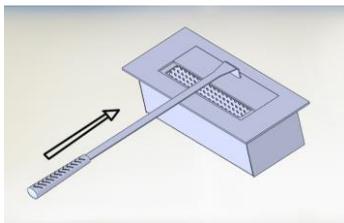


CAUTION:

Please ensure your pebbles or logos are not covering the opening in case of accidental spillage.

Any spilled ethanol must be immediately removed with an absorbent tissue and cleaned with water to prevent ignition outside the burner reservoir.

Fuel must be kept in safe distance (min. 1 m/40 inches) to the fireplace. Do not place fuel in front of the fireplace.

Step 2: Use a long match or a long-end lighter to ignite. When igniting, keep a safe distance at arm's length.

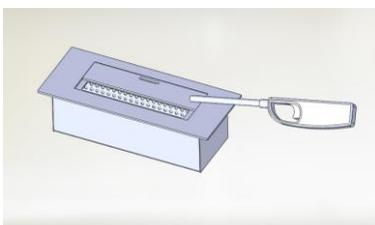

CAUTION:


Fuel will burn low at first. Please allow 10-15 minutes to reach the optimum temperature and flame height.

Opening or closing the sliding cover on the burner can adjust the flame.

Avoid drafts for long burning time.

Always maintain a safe distance of at least 1 meter (40 inches) from the fireplace when the flame is lit.

Extinguishing

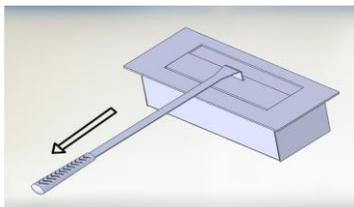

CAUTION: Never extinguish the flame with water!

1. Let the fuel burn out completely if possible. This prevents alcohol left in the burner and deflagration when reigniting.
2. If you wish to extinguish the fire before the fuel has completely burned out. Please use the control tool to fully close the sliding cover of the burner in a fast motion, completely extinguish the flame.
 1. In case the flame is not extinguished immediately. Repeat the above instructions until the flame is fully extinguished.
 2. **Do not** touch the fireplace while burning. Please allow at least 15 minutes to cool down before touching the fireplace after flame is extinguished.
 3. It is urgently recommended that you keep a Class B fire extinguisher at hand close to the device in case of fire.

Refilling

Allow the burner to cool down for at least 15 minutes before refilling. **Warning: Never refill the burner when the fireplace is operating or still hot.**

Never pour fuel into the burning flame.



Cleaning:

1. The burner surfaces must be cleaned regularly. Use warm water and washing-up liquid.
2. Check the sliding cover of burner for warp or damage before using.
3. Marks can be best removed with a soft cloth and a mixture of lukewarm water and a small amount of cleaning liquid (ph-neutral). We recommend cleaning the stainless steel items regularly to prevent contamination.

CAUTION:

Never use chemical, steel-wool or scrubbing sponges to clean the fireplace. These can scratch the surface.

The manufacturer cannot be held responsible for any damages resulting out of false use and/ or cleaning of the products.

SAFETY INSTRUCTION

1. When burning ethanol, water-vapor and carbon dioxide are produced.
2. **Never** leave an open fire unattended at any time!
3. In a house of typical construction, that is, one that is not of unusually tight construction due to heavy insulation and tight seals against air infiltration, an adequate supply

of air for combustion and ventilation is provided through infiltration. The fireplace should not be used in a small room where less than 44m³ (1550ft³) of air space is provided for each 1000 Btu per hour of fireplace (considering the maximum burner adjustment).

4. Do not use the fireplace in a bathroom, a room where sleeping accommodation is provided or any other small room.

CAUTION:

1. Fireplace and burner get hot while in operation. **Do not** touch the fireplace while burning. Please allow at least 15 minutes to cool down before touching the product after flame is extinguished.
2. **Risk of burns.** Do not operate the ethanol fireplace without completed assembly.
3. **Never** pour fuel into an open flame or into the burner reservoir unless it has cooled down for at least 15 minutes after used.
4. **Do not** place any flammable material within 1 meter/ 40 inches around the fireplace. A safety distance of at least 2 meters/80 inches should be kept from any window or curtain.
5. **Do not** burn under over hanging items.
6. **Do not** smoke while handling the fuel.
7. **Avoid** airflow in the room where the fireplace is operated.

WARNING:

1. Risk of Explosion
 - i. **Never** use any fuel other than Moda Flame Bio Ethanol. Never use gasoline.
 - ii. **Never** use the appliance in areas where flammable vapors or gas may be present.

- iii. **Never** store or transport the fuel in other than a metal or plastic container that is acceptable for use with the specified fuel in accordance with the Consumer Chemicals and Containers Regulations 2001 and is the original container for the specified fuel.
 - iv. **Never** store fuel in the living space or in the same location as the appliance.
2. Do not use the appliance to heat or boil water or use as a cooking appliance.
 3. Due to high surface temperatures, keep children, clothing, and furniture away
 4. Risk of Indoor Air Pollution - Use ethanol fireplace only in well-ventilated areas and with doors of adjacent room open. Do not obstruct air flow to the burner by piling logs over the burner, but only around it and do not obstruct the burner in any other way or with any other material. People with breathing problems should consult a physician before using the ethanol fireplace.
 5. **THIS APPLIANCE HAS NOT BEEN TESTED WITH DOORS OR AN UNVENTED GAS LOG SET. TO REDUCE RISK OF FIRE OR INJURY, DO NOT INSTALL DOORS OR AN UNVENTED GAS LOG SET INTO THIS APPLIANCE.**

Warranty:

1. Our fireplaces are guaranteed 1 year, parts and labor. Warranty begins on the date of purchase.
2. Warranty will be applied on presentation of a dated cash receipt and is strictly limited to factory service repair of the piece or pieces that are found to be defective.
3. Installations costs will not be reimbursed in any case as damages for any reason whatsoever.

4. Manufacturer will not be held responsible for any incidental or consequential defects, on goods or individuals.
5. The warranty will not be applied if devices have been subjected to abnormal use or if used under other conditions of use than the ones they were intended for.
6. The warranty will not apply in case of deterioration or accident due to negligence, damages caused by failing to maintain and service the device or resulting from an alteration of material.

Moda Flame

Tel: 347-410-8000

Email: INFO@MODAFLAME.COM

Website: www.MODAFLAME.com